



INNER REAR VIEW MIRROR

COMPONENTS

MI

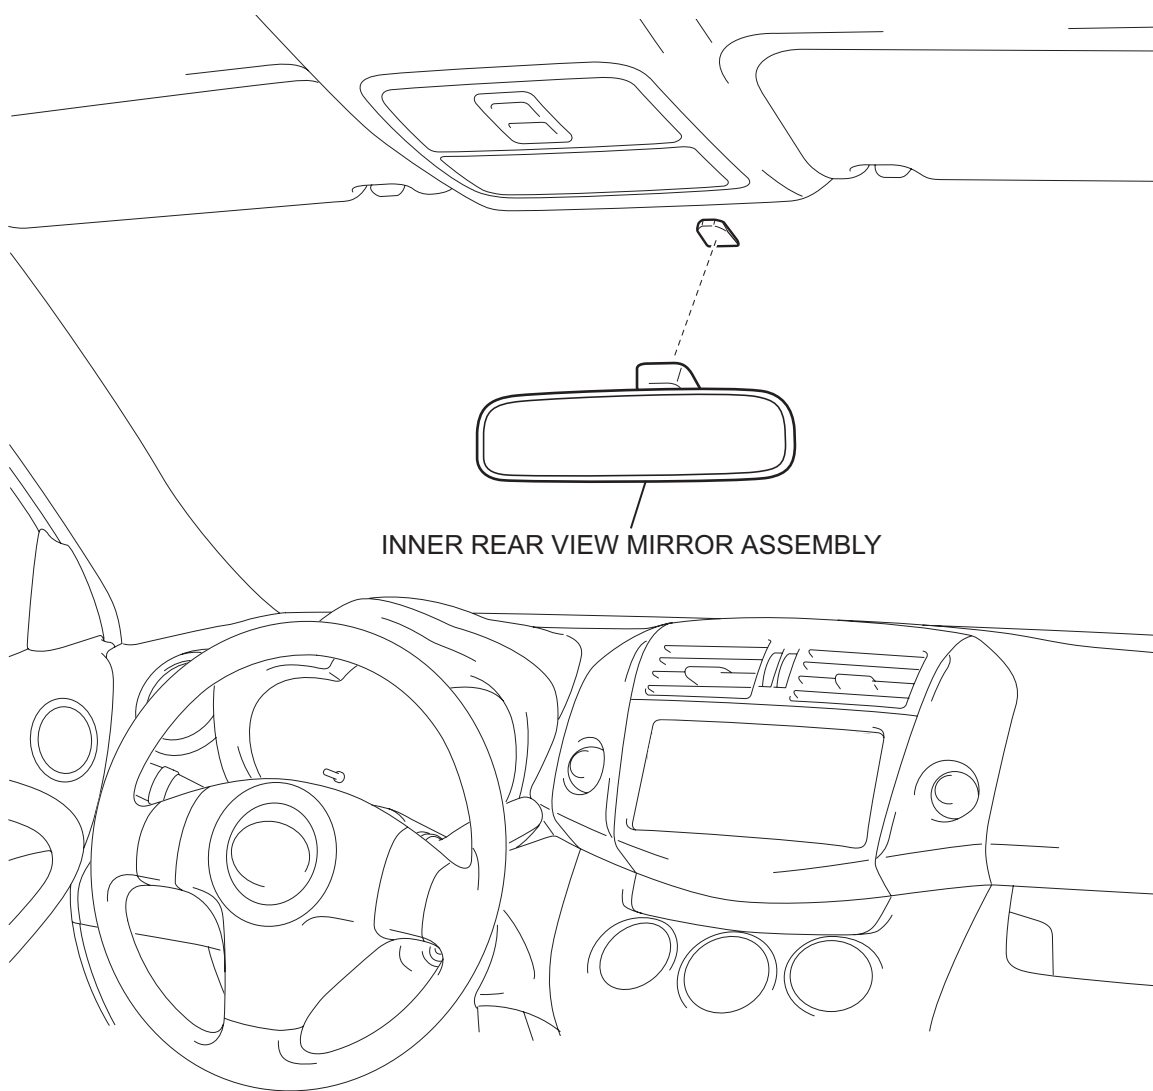


INNER REAR VIEW MIRROR ASSEMBLY

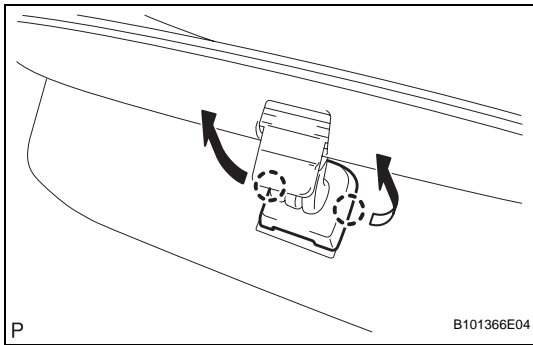


REMOVAL

1. **REMOVE INNER REAR VIEW MIRROR ASSEMBLY**
 - (a) Disengage the 2 claws and separate the inner rear view mirror cover as shown in the illustration.

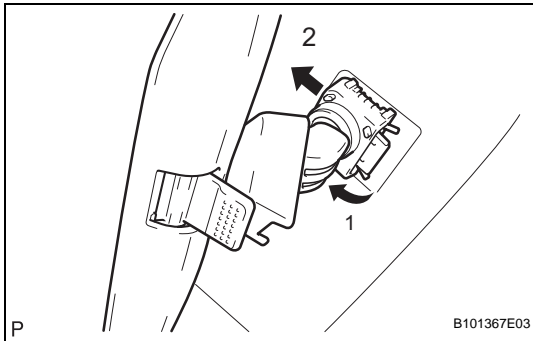

- (b) Remove the inner rear view mirror as shown in the illustration.

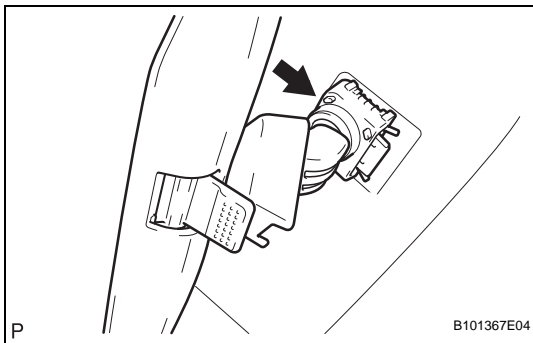

INSTALLATION

1. **INSTALL INNER REAR VIEW MIRROR ASSEMBLY**
 - (a) Install the inner rear view mirror as shown in the illustration.
 - (b) Install the cover.